

Low Cost On-Off Temperature Controller – LC5248

Ref No: m49l/om/101

Issue No: 06

masibus

User's Manual

Low Cost On - Off Temperature Controller

Contents

(1) INTRODUCTION	(02)
1.1 Purpose of the Manual	
1.2 Product over View / Description	
1.3 Product Ordering Code	
1.4 List of Accessories	
(2) SAFETY / WARNING	(03)
PRECAUTIONS	
2.1 Safety Precautions	
2.2 Warning Precautions	
(3) INSTALLATION GUIDELINES	(03)
3.1 MOUNTING DETAILS	(03)
3.2 TERMINAL CONNECTION	(04)
3.3 FRONT PANEL DESCRIPTION	(04)
(4) OPERATION GUIDELINE	(04)
4.1 RUN MODE	(04)
4.2 PASSWORD MODE	(05)
4.3 CONFIGURATION MODE	(05)
4.3.1: Configure Input Type	
4.3.2: Configure Zero	
4.3.3: Configure Span	
4.3.4: Configure Set point Type-1	
4.3.5: Configure Hysteresis-1	
4.3.6: Configure Set point Type-2	
4.3.7: Configure Hysteresis-2	
4.3.8: Configure Open Sensor	
4.3.9: Configure Decimal Point	
4.3.10: Configure Brightness	
4.3.11: Configure Password	
4.4 CALIBRATION MODE	(07)
4.4.1: Calibration of Ambient	
4.4.2: Calibration of Zero	
4.4.3: Calibration of Span	
(5) SPECIFICATIONS	(07)
5.1: Displays	
5.2: Inputs	
5.3: Input Range	
5.4: Accuracy	
5.5: Output	
5.6: Calibration	
5.7: Types of Set points	
5.8: Power Supply	
5.9: Environmental condition	
(6) Application of LC5248 Temperature Controller	(09)
(7) Maintenance	(09)

Figures

Figure 1: Typical Relay Operation	(02)
Figure 2: Mounting Details	(03)
Figure 3: Terminal Connections	(04)
Figure 4: Details of Front Panel	(04)
Figure 5: Direct Load connected with line	(09)
Figure 6: Direct Load connected with neutral	(09)

Note:

Information in this manual is subject to change without prior notice or permission.



WARNING SYMBOL

The symbol calls attention to the operating procedure, practice or the like which if not correctly performed or adhered to, could result in personal injury or damage to or destruction of part or all of the product and system. Do not proceed beyond a warning symbol until the indicated condition are fully understood and met.



CLASS-2 TYPE OF INSTRUMENT

Note: Class-2 – Instrument is using Line & Neutral for Power Supply Input.

1. INTRODUCTION

1.1. Purpose of the Manual:

1.1.1. How to read this manual???

Installer: Read Chapters 1, 4, 5

System Designer and New User: Read All Chapters

Expert User: Read Chapters 5, 6, 7

1.1.2. Regarding This User's Manual

- This manual should be provided to the end user. Keep an extra copy or copies of the manual in a safe place.
- Read this manual carefully to gain a thorough understanding of how to operate this product before starting operation.
- This manual describes the functions of this product. Masibus does not guarantee the application of these functions for any particular purpose.
- Under absolutely no circumstances may the contents of this manual, in part or in whole, be transcribed or copied without permission.
- The contents of this manual are subject to change without prior notice.
- Every effort has been made to ensure that the details of this manual are accurate. However, should any errors be found or important information be omitted, please contact your nearest Masibus representative or our sales office.

1.2. Product over View / Description:

Model LC5248 is a microcontroller based On/Off Temperature controller, incorporate bright, 4 Digit Seven Segment Display indicating process value and set value.

ON/OFF Controller is the simplest form of temperature control device. The output from the device is either on or off, with no middle state. An on-off controller will switch the output only when the temperature crosses the setpoint. For heating control, the output is on when the temperature is below the set point, and off above set point.

Since the temperature crosses the set point to change the output stage, the process temperature will be cycling continually, going from below set point to above, and back below. In cases where this cycling occurs rapidly, and to prevent damage to contactors and valves, an on-off differential, or "hysteresis," is added to the

controller operations. This hysteresis assures, if temperature exceed set point by a certain amount before then only output will turn off or on again. On-Off hysteresis prevents the output from "chattering" or making fast, continual switches if the cycling above and below the set point occurs very rapidly.

TYPICAL RELAY OPERATION

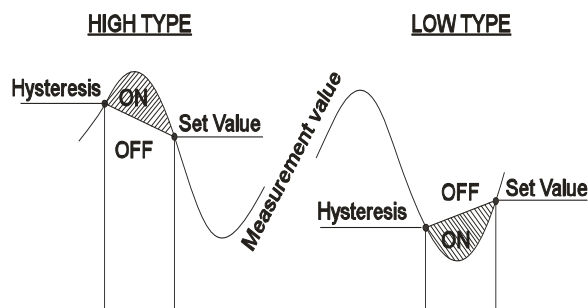


Figure 1: Typical Relay operation

High type:

For High type of set value, once process value reaches up to set point + Hysteresis value, relay will be ON after nearly 1.5 seconds and it will be ON until process value goes down to Set point.

Low type:

For Low type of set value, once process value reaches down to set point - Hysteresis value relay will be ON after nearly 1.5 seconds and it will be ON until process value goes up toward Set point.

1.3 Product Ordering Code:

LC5248			
Input Types		Aux Power Supply	
X		XX	
1	J(W/1°C)	U1	85-265 VAC
2	J(W/0.1°C)	U2	18-36 VDC
3	K(W/1°C)		
4	K(W/0.1°C)		
9	PT-100, 3W		
C	4-20 mA		
D	0-20 mA		
E	1-5 VDC		
F	0-5 VDC		

X = Specify from table

1.4 List Of Accessories:

Sr. No.	Description Of Accessories	Quantity
1	Mounting Clamps	02

Mounting clamps should be of proper length and type according to the module of instrument.

2. SAFETY / WARNING PRECAUTIONS

2.1. Safety Precautions:

High voltages capable of causing damage are sometimes present in this instrument. Before installation or beginning of any troubleshooting procedures the power to all equipment must be switched off and isolated. Units suspected of being faulty must be disconnected and removed first and brought to a properly equipped workshop for testing and repair. Component replacement and interval adjustments must be made by a company person only.

2.2. Warning Precautions:

- Before wiring, verify the label for correct model no. and options.
- Wiring must be carried out by personnel, who have basic electrical knowledge and practical experience.
- It is recommended that power of these units to be protected by fuses, circuit breakers or external over current rated at the minimum value possible.
- All wiring must confirm to appropriate standards of good practice and local codes and regulations. Wiring must be suitable for voltage, current, and temperature rating of the system.
- Beware not to over-tighten the terminal screws.
- Unused control terminals should not be used as jumper points as they may be internally connected, causing damage to the unit.
- Verify that the ratings of the output devices and the inputs as specified in Chapter 7 are not exceeded.
- Upon receipt of the shipment remove the unit from the carton and inspect the unit for shipping damage. If any damage due to transit, report and claim with the carrier. Write down the model number and serial number for future reference when

corresponding with our *Customer Support Division*.

- Do not use this instrument in areas such as excessive shock, vibration, dirt, moisture, corrosive gases or rain. The ambient temperature of the areas should not exceed the maximum rating specified.
- Provides power, from single-phase instrument power supply. If there is a lot of noise in the power line, insert an insulating transformer into the primary side of the line and use a line filter on the secondary side. As counter measures against noise, do not place the primary and secondary power cables close to each other.

3. INSTALLATION GUIDELINE

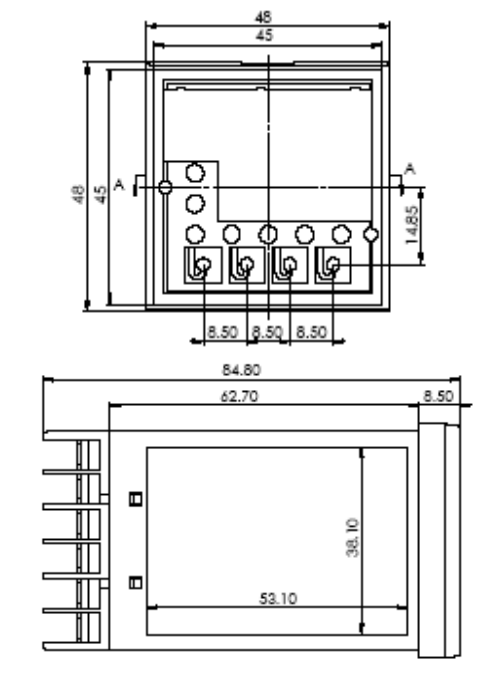
3.1 Mounting Details

Figure 2: Mounting Details

FRONT BEZEL: 48 x 48 mm

PANEL CUTOUT: 45 x 45 mm

DEPTH BEHIND THE PANEL: 77 mm

Note:

UNPACKING: Upon receipt of the shipment remove the unit from the carton and inspect the unit for shipping damage. If any

damage due to transit, report and claim with the carrier. Write down the model number, serial number, and date code for future reference, when communicating with our [Customer Support Division](#).



Use external switch or circuit breaker and external over current protection devices to protect whole panel or instrument in hazardous condition.



Do not use this instrument in areas such as excessive shock, vibration, dirt, moisture, corrosive gases or rain. The ambient temperature of the areas should not exceed the maximum rating specified.

3.2 Terminal Connection

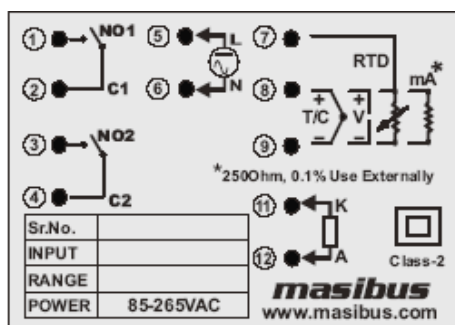


Figure 3: Terminal connection

1. Terminal 5 & 6:

Power Supply Input
(85-265VAC @ 50Hz /
120-290VDC or 18-36 VDC(optional)).

Note:

- Use >250V-1Amp Cable for Power Supply.
- If cable has two parallel wires inside then Isolation between the wires should be 2.5 KV.

2. Terminal 1 & 2:

For Relay-1 potential free Contacts (Use
230V -2A load)

3. Terminal 3 & 4:

For Relay-2 potential free Contacts (Use
230V -2A load)

5. Terminal 7:

For RTD Input Only

6. Terminal 8 & 9:

For T/C & Linear Input (For Current Input –
Use Resistor 250Ω 0.1% externally).

3.3 FRONT PANEL DESCRIPTION

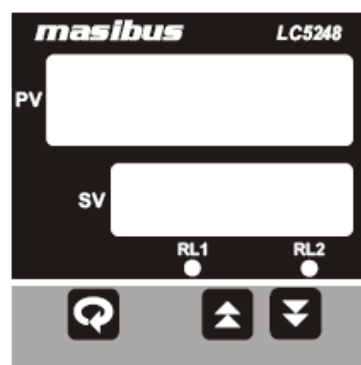


Figure 4: Details of Front Panel

1. Ent Key:



- By pressing increment-Decrement key, Increment & Decrement value in SV window respectively.
- On pressing ENT Key, the Respective value is stored and Displayed on SV window in CONF and CAL mode.

2. Increment key & Decrement Key:



- On pressing this both key Shows PASS in PV windows.

3. PV window:

- 4 digital 0.40 inch RED Display.

4. SV window:

- 4 digital 0.28 inch GREEN Display.

5. Relay-1 Indication:

- ON when relay-1 is energized.

6. Relay-2 Indication:

- ON when relay-2 is energized.

4. OPERATION GUIDELINE

4.1 Run Mode:

Ambient will be displayed when decrement key is pressed in run mode. (Only if T/C type input is selected).

Press



30.0

if enter key pressed, then setpoint-1 will appear on PV window.

Press



st-1.

Press  OR  **100**
 (By inc/dcr key value of setpoint-1 can be changed in SV window)
 Press  **st-2.**

(This will save the changed or unchanged setpoint1 value.)

Press  OR  **200**
 (By inc/dcr key value of setpoint-2 can be changed in SV window)

When enter key  pressed, changed or unchanged value of SETPOINT-2 will be saved as in SV window and unit will come in run mode.

4.2 Password Mode:

Press  +  Key together to enter password mode.

Display **PASS.**
 Press  **0**
 Press  OR  **1**
 Press  **ConF**

Once correct password is entered, then configuration will be displayed. if user does not change the password from “change password” submenu then initial password would be 1, else the user can change the password by entering into “configure mode” and going to “pass” submenu.

Press  +  Key together to come out of password mode.

4.3 CONFIGURATION MODE

Press  +  and then it will show “PASS”, enter correct password and then press  key to enter configure mode.

4.3.1 CONFIGURE INPUT TYPE

Display **ConF**
 Press  **InPt.**
 Press  **tCk1**

Press  OR  **tCk.1**
 Press  **InPt.**
 (To save changed or unchanged value of ZERO as in SV window)

Press  to configure ZERO,

4.3.2 CONFIGURE ZERO

Display **zErO.**
 Press  **-100**
 Press  OR  **-150**
 (By inc/dcr key value of zero can be changed in SV window)
 Press  **zErO.**
 (To save changed or unchanged value of ZERO as in SV window)

Press  to configure SPAN,

Press  to configure INPT

4.3.3 CONFIGURE SPAN

Display **span.**
 Press  **1200**
 Press  OR  **1372**
 (By inc/dcr key value of span can be changed in SV window)
 Press  **SPAN.**
 (To save changed or unchanged value of SPAN as in SV window)

Press  to configure SET POINT1 type,

Press  to configure ZERO

4.3.4 CONFIGURE SET POINT1 TYPE

Display **tSP1.**
 Press  **H on**
 Press  OR  **L on**
 (By inc/dcr key value of setpoint-1 can be changed in SV window)
 Press  **tSP1.**
 (To save changed or unchanged value of SETPOINT-1 type as in SV window)

Press  to configure Hysteresis-1,
Press  to configure SPAN

4.3.5 TO SET VALUE OF HYSTERESIS 1

1. Display **Hy-**

Press  10

Press  OR  20

(By inc/dcr key value of hysteresis -1 can be changed in SV window)

Press  **Hy-**

1.

(To save changed or unchanged value of HYSTERESIS-1 as in SV window)

Press  to configure setpoint-2 type,

Press  to configure setpoint-1 type

4.3.6 CONFIGURE SET POINT2 TYPE

Display

tSP2.

Press  **H on**

Press  OR  **L on**

(By inc/dcr key value of setpoint-2 can be changed in SV window)

Press  **tSP2.**

(To save changed or unchanged value of SETPOINT-2 type as in SV window)

Press  to configure Hysteresis-2,

Press  to configure Hysteresis-1

4.3.7 TO SET VALUE OF HYSTERESIS 2

2. Display **Hy-**

Press  10

Press  OR  20

(By inc/dcr key value of hysteresis -1 can be changed in SV window)

2. Press  **Hy-**

(To save changed or unchanged value of HYSTERESIS-1 as in SV window)

Press  to configure open sensor,

Press  to configure setpoint2 type

4.3.8 CONFIGURE OPEN SENSOR

Display **OPES.**

Press  **UP**

Press  OR  **dn**

(By inc/dcr key value of open sensor can be changed in SV window)

Press  **dn**

(To save changed or unchanged value of Open sensor as in SV window)

Up scale: Under Open condition PV is treated above set point.

Down scale: Under Open Condition PV is treated below set point.

Table-1:

Relay type	PV	Relay	Led
Hi-On	PV > SP	On	On
	PV < SP	Off	Off
Open sensor	Up scale	On	On
	Down scale	Off	Off
Low-On	PV > SP	Off	Off
	PV < SP	On	On
Open sensor	Up scale	Off	Off
	Down scale	On	On

Where SP = Set Point.

PV = Process value

Press  to configure BRIGHTNESS (If linear input type is not selected) or DP (If linear input type is selected)

Press  to configure Hysteresis-2.

4.3.9 CONFIGURE DECIMAL POINT

Display **dP.**

Press  000.0

Press  OR 
00.00

(By inc/dcr key value of decimal point can be changed in PV and SV window)

Press  **dP.**
(To save changed or unchanged value of DECIMAL POINT as in PV and SV window)

Press  to configure Brightness,

Press  to configure OPSENSOR,

Note:

1. Decimal Point is only available with 0-5V (0-20mA) or 1-5V (4-20mA) input.

4.3.10 CONFIGURE BRIGHTNESS

Display **BRhT.**

Press  10

Press  OR  50

(By inc/dcr key value of brightness can be changed in SV window)

Press  50

(To save changed or unchanged value of BRIGHTNESS as in SV window)

Press  to configure DP (if linear input type) or open sensor

Press  to configure PASSWORD,

4.3.11 CONFIGURE PASSWORD

Display **PASS.**

Press  0

Press  OR  1

(By inc/dcr key value of password can be changed in SV window)

Press  **PASS.**

(To save changed or unchanged value of password as in SV window)

Press  to configure BRIGHTNESS.

Press  +  Key together to come out of configuration mode.

Press  +  Key together to enter in run mode.

4.4 CALIBRATION MODE

Here one-shot calibration is implemented. Press

 +  and then it will show “PASS” i.e. password mode, enter correct password and then press  and then  Key to enter calibration mode.

4.4.1 CALIBRATION AMBIENT

Display **Cal**

Press  **Amb.**

Press  30.0

Press  OR  31.0

(By inc/dcr key value of ambient can be changed in SV window)

Press  **Amb.**

(To save changed or unchanged value of AMBIENT as in SV window)

Press  to configure ZERO,

4.4.2 CALIBRATION OF ZERO

Display **CALZ.**

Press  -099

Press  OR  -100

(By inc/dcr key value of calz can be changed in SV window)

Press  **CALZ.**

(To save changed or unchanged value of CALZ as in SV window)

Press  to calibrate SPAN,

Press  to configure AMB,

4.4.3 CALIBRATION OF SPAN

Display **CALS.**

Press  1099

Press  OR  1200

(By inc/dcr key value of cals can be changed in SV window)

Press  **CALS.**

(To save changed or unchanged value of CALS as in SV window)

Press  to configure ZERO,

Note:

1.Amb calibration is only available with J,K - T/C input.

Press  +  Key together to come out of calibration mode.

5. SPECIFICATION**5.1 DISPLAYS:**

- **Process Value and Parameter display:**
4 digits 0.40" Seven Segment Red LED's
For Process Variable in **degree Celsius**.
4 digits 0.28" Seven Segment Green LED's for set Value in **degree Celsius**.
- **Status Display:** Individual discrete Red LED's to Indicate relay status.
- **Operation Keys:** INC, DEC (For increment and decrement of various parameters and setpoint).
SET1 and SET2(set parameters and setpoints).

5.2 INPUTS:

- RTD - PT100 3-wire, PT-100 (0.1 °C) (Automatic 3 wire compensation)
- Thermo-couple types J, K, J (0.1 °C), K (0.1 °C) (ANSI standard)
- 4-20mA/1-5 V dc linear
- 0-20mA/0-5 V dc linear
- Burn out Current : 0.25 uA
- CMRR : > 120dB
- NMRR : > 40dB
- Input Impedance : > 1MΩ
- Resolution : 15 bits
- Sampling Period : 55mS

5.3 INPUT RANGE:

PT100 : -200 to 850 °C
 PT100 (0.1 °C) : -199.9 to 850.0 °C
 J : -200 to 1200 °C
 K : -200 to 1372 °C
 J, K (0.1 °C) : -199.9 to 999.9 °C
4-20mA/1-5VDC, 0-20mA/0-5VDC:
 -1999 to 9999 (Field Scalable)
 (For Current Input Use Resistor 250Ω 0.1% Externally).

5.4 ACCURACY:

- **Linear:**
±*0.25 % Full Span ± 1 Count
- **RTD ,T/C:**
For >0°C ±*0.25% Full Span ± 1 Degree
For <0°C ±*0.5% Full Span ± 1 Degree

* Subject to recalibration.

5.5 OUTPUT:

- **Relay O/P:**
Rating: 2A/230VAC
Life cycle Mechanical: 10⁵ times
Life Cycle Electrical: 10⁵ times

5.6 CALIBRATION:

- Zero and Span calibration for input using front panel keypad.
- CJC for T/C type input and 3-wire lead compensation for RTD sensor is automatic.
- Instrument Warm-up Time approx. 30 Min.

5.7 TYPES OF SET POINT:

- Set point types are configurable to energize relays for actual value below or above set point with delay time for individual Relay.
- Hysteresis setting 0 to 100 Counts.

5.8 POWER SUPPLY:

- **Operating Supply:**
➤ 85 - 265VAC@50Hz / 120-290 VDC
➤ 18 - 36VDC (Optional)
- **Power consumption:**
< 5VA

5.9 ENVIRONMENTAL CONDITION:

- **Insulation Resistance:**
>200MΩ @ 500VDC
- **Molding type:** ABS Plastic
- **Weight:** 120 Gms.
- **Ambient Temperature:** 0 to 55 °C
- **Humidity:** 30 to 95% RH non-condensing
- **Storage Temperature:** 0-80 °C

6. Applications Of LC5248 Temperature Controller:

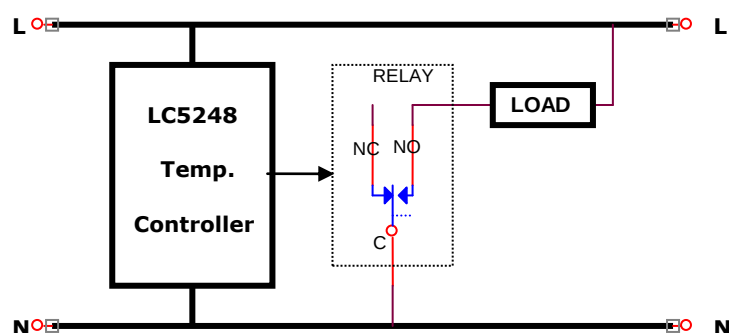


Figure 5: Direct Load Connected with Line

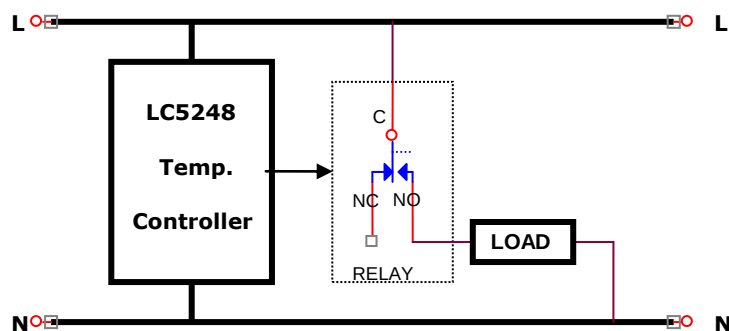


Figure 6: Direct Load Connected with Neutral

Note:

1. Relay has three potential free terminals C & NO. User can use according to application either C to Line or Neutral.
2. The application Figure is for reference only.

7. Maintenance:



As a precautionary step, please switch off the units before troubleshooting. Disconnect the Unit suspected of being faulty and bring it to workshop for testing and repair. Component replacement or any other change must be made by a company person only.